



PhaseGuard

In-line Interface Monitor for Turbidity or Colour



Applications

- Monitoring and controlling of interfaces in beverages such as beer, fruit juices, etc.
- Optimization of beer / yeast separation steps
- Monitoring of clean in pipe processes (CIP),
 e.g. in the dairy industry
- Minimizing product losses and increasing yields
- Recognition of interfaces for product change over or product push-out
- Faster processing time due to better resolution of start-stop conditions

Advantages

- Sealless design
- Extremely low maintenance
- Recognition of interfaces by turbidity or colour
- Easy selection of the right model due to fix pathlengths
- Easy configuration and system integration

Industries

- Beverage
- Food and Dairy Industry
- Chemical Industry
- Pharmaceutical Industry

Innovations with tangible benefits

Sealless Design

The days of spending time doing routine maintenance for regular replacement of seals have gone. The sealless design with sapphire windows is well-proven and established. The PhaseGuard can be applied in virtually all interface monitoring/switching application in many different industries.



Simple Concept

Three models cover all possible applications: phase switching for turbidity (model T), for colour (model C) for high turbidity, like for example beer/yeast (model HT). Selecting the right model is easy thanks to fixed pathlengths and appropriate materials.



Quality- and Cost Optimized

The PhaseGuard is factory adjusted with an optimized universal measuring range based on absorption percentage. Once installed it is only necessary to perform an occasional zero check. The use of well-proven optical components guarantees the quality and reduces costs of purchase an maintenance. This results in a favourable total cost of ownership.

PhaseGuard Configuration

Language 0: German, 1: English = 0

Limits Mode 0: Off, 1: Exceeded, 2: Undershot

Limits Upper limit

= 1.000

Limits Lower limit

= 0.900

Integration

=1s

Output 1 Invert 0: No, 1: Yes

= 0

Output 2 Invert 0: No, 1: Yes

= 0

Flexible Configuration

For simple applications and system integration the instrument configuration and communication can be easily done using the integrated USB interface with a parameter file in combination with the existing outputs. For a more comfortable installation and operation the optional control unit SICON with touch screen technology and colour display can be connected.

Details and technical data:





PhaseGuard

Technical data

Sensor Measuring principle: Absorption

Wavelength: LED 880 nm (turbidity)

LED 430 nm (colour)

Measuring range: 0 ... 100% Absorption Resolution: 0.5% Absorption Path-length: 10 mm (models T & C)

5 mm (model HT)

Outputs: 1x 4 ... 20 mA

2x Open-Collector-Transistor

Installation: In-line housing Varivent®

or compatible

Pipe diameter: ≥ DN 40

Material sensor head: Stainless steel, 316L Material housing: Stainless steel, 304

Windows: Sapphire

Sample temperature: -10 ... +100 °C / +14 ... +212 °F Cleaning: CIP/SIP compatible up to

+120 °C / +248 °F @ 2h 1 MPa (10 bar) / +100 °C

Pressure: Ambient temperature: -10 ... +50 °C Ambient humidity: 0 ... 100% RH

Protection degree: **IP66** 9 ... 30 VDC Power supply:

Power consumption max.: 2 W (3 W with Profibus DP)

Operation

Configuration: USB Interface and parameter

Communication (optional): Profibus DP, Modbus RTU,

HART

Control unit SICON

(optional)

9 ... 30 VDC Power supply:

Power consumption max.: 8 W (with instrument)

Display: 1/4 VGA, 3.5" Operation: Touchscreen Ambient temperature: -10 ... +50 °C Ambient humidity: 0 ... 100% RH **IP66** Protection degree:

Outputs: 4 x 0/4 ... 20 mA, galv.

> separated 7 x digital

Inputs: 5 x digital, freely configurable

Digital interfaces: Ethernet, microSD-card,


Modbus TCP

Optional modules (max. 2): Profibus DP, Modbus RTU,

HART

4 x 0/4 ... 20 mA outputs,

galv. separated 4 x 0/4 ... 20 mA inputs

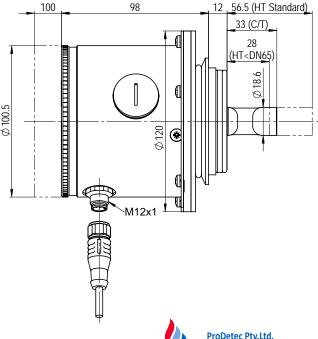



ProDetec Pty.Ltd.

- +61 (02) 9620 8700
- +61 (02) 9620 8755
- E. info@prodetec.com.au
- A. 17/38 Powers Rd, Seven Hills NSW 2147

